



New CTP Replacement Parts for Heavy Equipment

CTP POWER TRAIN STATORS

Maintain & Increase Efficiency



Torque Converters are an essential part of your automatic transmission. They not only allow your vehicle to come to a complete stop without stalling the engine, but also provide more torque when accelerating out of a stop, ultimately, giving you more control over your machine's movements.

Stators are located at the center of the **Torque Converter**. They redirect the fluid returning from the turbine before it hits the pump again, increasing the efficiency of the **Torque Converter**

Part No.	Description	Machine Application
1T0538	STATOR A	924F, 926
1T0708	STATOR	637, 977K/L, 980, 983
1T0813	STATOR	980B
1T1331	STATOR	814, 815, 950F, 960F
1T1752	STATOR	769C
1T1981	STATOR A	D4H
1T1991	STATOR A	518, 561H, 613C
1T2052	STATOR A	D6H, D7F, D8N
6Y1090	STATOR	966F, 970F
8P9266	STATOR	D8L, D9L, D10N
9P9517	STATOR	966D, 966E, 966F
9W4702	STATOR	980C, 980G, 988B



*Other part no. not included in the list are available. Please contact your sales representative if you have any questions.
Part Numbers are used for reference purposes only

Quality with Value Guaranteed™